

Refer to:
Installation Instructions for FSD-XXX, DFD-XXX, DFDTF-XXX,
SSFSD-XXX, & CFSD-XXX (Part no. 461336)

These instructions are provided for changing fusible links on DFDTF-210.



1. Damper in the open position with fusible link attached



2. Damper in the closed position with melted fusible link. Straighten out upper part of link strap. Remove melted fusible link.



3. Label with instructions on how to open damper.



4. Push in lever.




5. Push in lever and grab blade bracket to open blades up.




6. Open blades up fully.



7. Blades fully open.

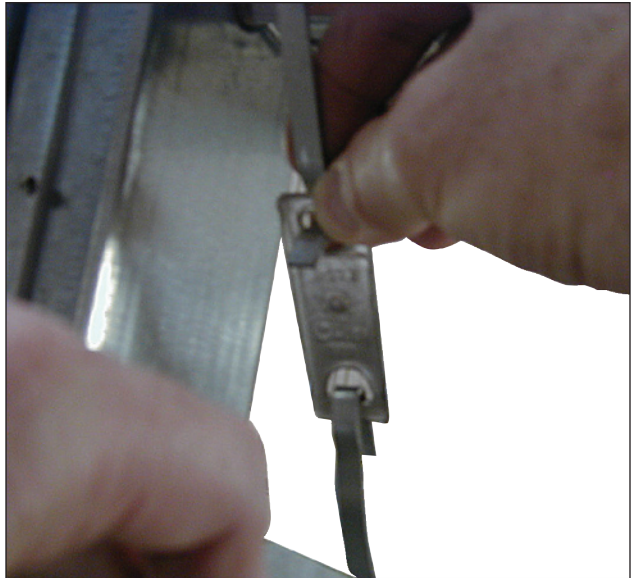

8. While holding blades open, hook fusible link onto lower strap. Put top strap through upper part of fusible link.

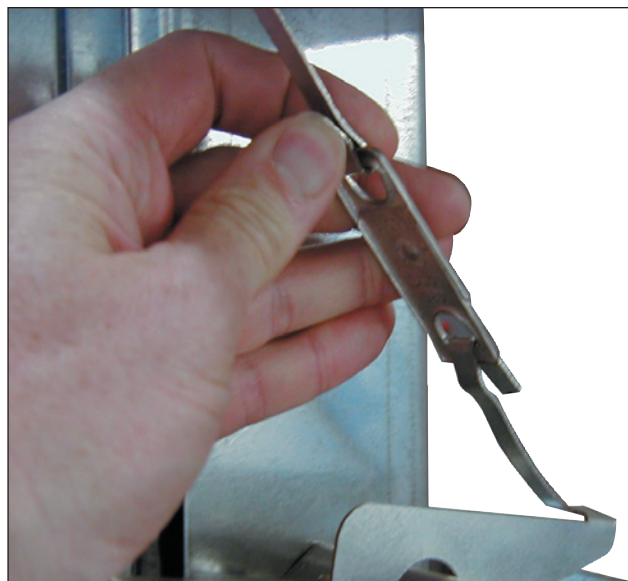

9. Bend top of strap up to hold fusible link in place.



P.O. Box 410 • Schofield, WI 54476-0410 • 715.359.6171 • greenheck.com

Copyright © 2005 Greenheck Fan Corporation
IOM #468738 Replacing Fusible Link on DFDTF-210

Rev. 1 November 2005