
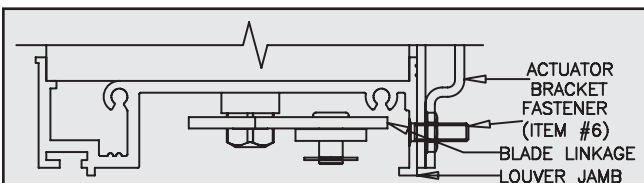
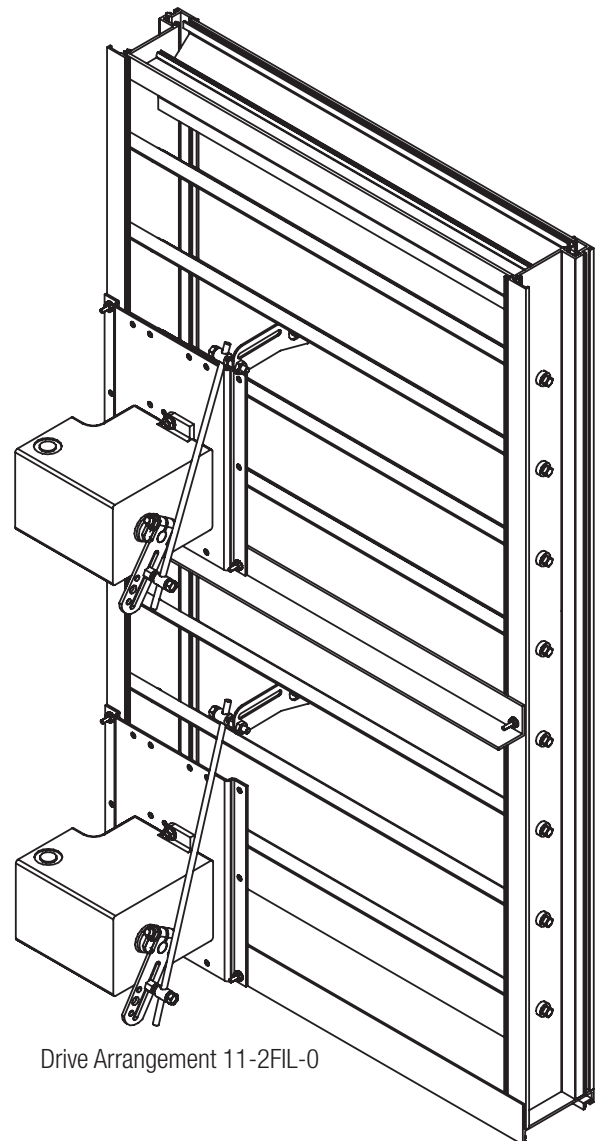


# Installation, Operation, and Maintenance Instructions

This manual is the property of the owner, and is required for future maintenance.  
 Please leave it with the owner when the job is complete.

Note: This drawing depicts how the actuator looks after installation. The louver shown is intended to be a general representation and the actual louver model may vary.

Reference the drawing on page 2 for an exploded view and parts list.

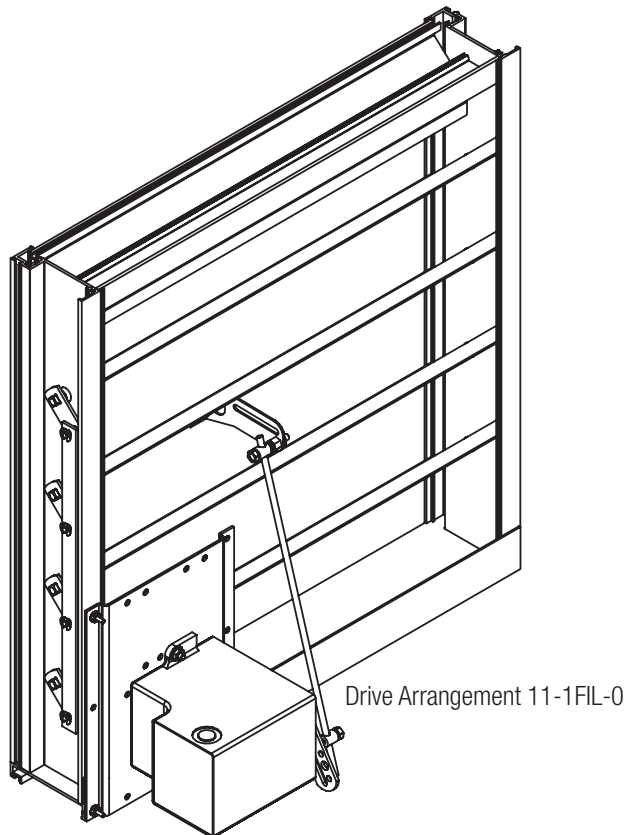

**CAUTION:** ATTACHING MOUNTING BRACKET WITH FASTENERS OTHER THAN AS SHOWN ABOVE CAN INTERFERE WITH BLADE LINKAGE OPERATION. ANY METHOD OF ATTACHMENT OTHER THAN THE ONE SHOWN IS NOT RECOMMENDED.

## SAFETY WARNING:

**Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating, and maintenance instructions thoroughly before installing or servicing this equipment.**

**Prior to Adjusting**

1. Louver MUST BE installed level and square for blades to operate correctly.
2. Install actuator and linkage similar to the drawing on page 1 and make the following linkage adjustments. Place ball swivel at initial location as show below. Adjust crankarm on the actuator so that it is parallel with linkage rod. If unit is "Fail Open" all adjustments will need to be made with the actuator in power on position

*Note: at this time the blades should flop freely.*

3. Loosen nut and bolt on actuator crankarm so that crank arm rotates freely by hand.



**Adjustment Process**

1. With blades closed, rotate crankarm on actuator 1/8 turn toward louver from original starting point. Hold blade with ball swivel in closed position and tighten driver blade ball swivel to drive rod.
2. Rotate crankarm on actuator 1/8 turn back to original position. Tighten nut and bolt on crank arm. This will apply extra pressure to blade seals.

*Note: For a multiple section unit, adjust actuators independently from each other.*


**Caution:** Before operating louver, make sure the ball swivel on the crankarm is in the correct location. If the blades are not completely closing the ball swivel can be adjusted SLIGHTLY. An over adjustment can cause damage to the blades.

**Caution:** Before operating the louver, make sure the location of the ball swivel on the crankarm allows the proper travel length.

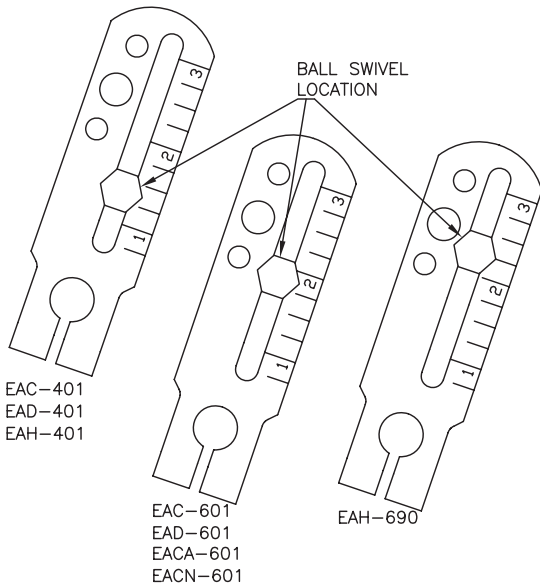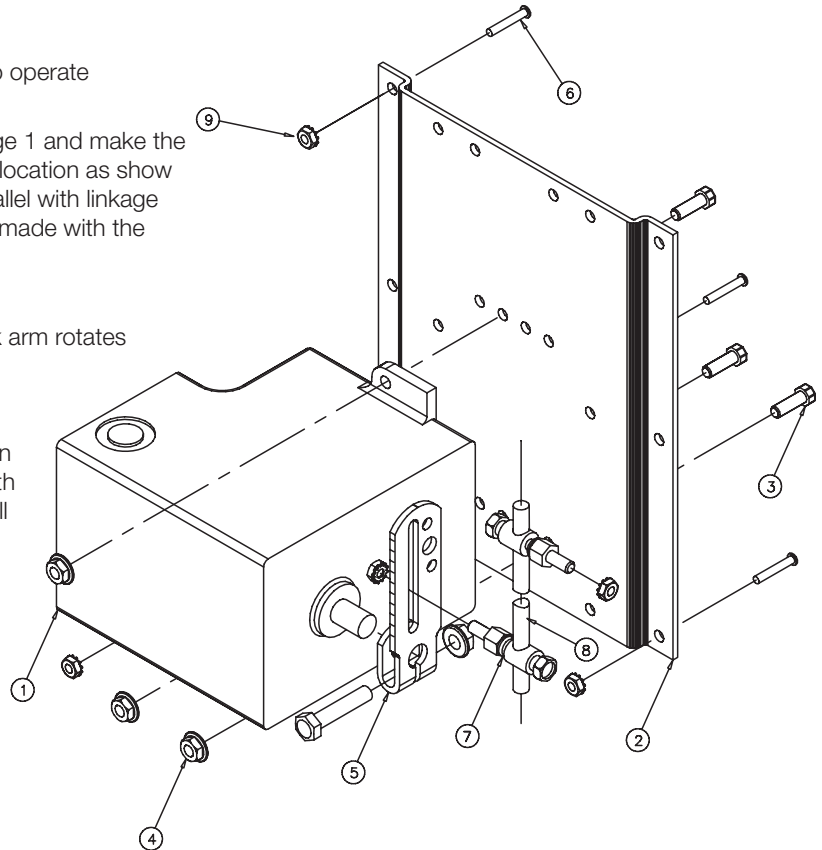

Item No.	Part No.	DA 11-1FIL-0 Qty.	DA 11-2FIL-0 Qty.	Description
1A	380712	1 Required per Unit	2 Required per Unit	Actuator MA-305 24V
1B	380720			Actuator MA-305-500 24V
1C	380708			Actuator MA-405 120V
1D	380722			Actuator MA-405-500 120V
1E	380713			Actuator MA-318 24V
1F	380721			Actuator MA-318-500 24V
1G	380709			Actuator MA-418 120V
1H	380723			Actuator MA-418-500 120V
2	508936	1	2	Actuator Mounting Bracket
3	415034	3	6	1/4-20 x .75 HH ZP MS (HK)
4	415455	3	6	1/4-20 x Spinlock Nut ZP (HK)
5	812097	1	2	Crankarm Assembly (HK)
6	416010	3	6	#10-32 x 1 Threadstud SS (HK)
7	451554	2	4	Ball Swivel 1/4-20 x 9/16 (HK)
8	656473	1	2	5/16 Diameter Rod, Galv., 16" Long
9	415991	3	6	#10-32 SS Keps Nut (HK)

It maybe necessary to adjust the swivel on the crankarm after the initial adjustments are made. This can be done by sliding the swivel in or out on the crankarm.

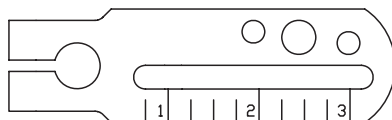

Sliding the swivel out on the crankarm will cause the blade to open more.  
 Sliding the swivel in on the crankarm will cause the blade to close more.